

# QUICK CONSUMER REFERENCE GUIDE

## YOUR SYSTEM: ADT PM33 Commercial System

### Starting to use the Alarm Panel and Keypad



PM33 Control Panel



KP-250 PG2 Keypad




Keyfob

## Setting Your System

### Step 1

When leaving your premises ensure that all protected doors/windows, including your front door, are closed before setting your System.

As a security feature, the status of your System is hidden from view

To start using your System, push the "unset" key  on your Keypad.

The Alarm Keypad is now lit and you are ready to start using your System, make sure that READY is displayed on the Keypad.

### Step 2

HH:MM READY

This indicates that all zones are secured and you may arm the System as desired.

### Step 3

 
 
If at least one zone is open (disturbed) the display will read:

HH:MM  
NOT READY

This indicates that the System is not ready for arming and in most cases that one or more zones are not secured. However, it can also mean that an unresolved condition exists such as certain trouble conditions, in this case call the customer service team 0344 800 1999.



## Setting Your System

To review the open zones click  on the Keypad. The details and location of the first open zone detector (usually an open door or window sensor) will be displayed. To fix the open zone, locate the sensor and secure it (close the door or window) – see “device locator” below. Each click of  on the Keypad will display another open zone or trouble indication. It is highly recommended to fix the open zone(s), thus restoring the System to the state of “ready to arm”. If you do not know how to do this, consult your installer.




**Note: To quit at any stage and to revert to the “READY” display, click  on the Keypad.**

**Device Locator:** The PowerMaster System has a powerful device locator that helps you to identify open or troubled devices indicated on the LCD display. While the LCD displays an open or faulty device, the LED on the respective device flashes indicating “it’s me”. The “it’s me” indication will appear on the device within max. 16 seconds and will last for as long as the LCD displays the device.

If the System is **READY** proceed as shown below.

If the System is **NOT READY** review any open zone detectors to locate and secure them.

If you want to arm using partitions, see “Partition Selection Process” and then proceed as shown below.

PRESS	RESULTING DISPLAY
 / 	ARMING AWAY
If Quick Arm is disabled	PRESENT TAG OR ENTER CODE:  -----
	PLEASE EXIT NOW

Vacate the premises (ARM AWAY) or ↓ (Exit delay) ↓

## Setting Your System

PRESS

RESULTING DISPLAY

Move to interior zone (ARM HOME)

ARMING AWAY



**ARM indicator** on both the Keypad and PowerMaster panel lights steadily during the armed state.

## Disarming Your System

Enter the protected premises via a delayed zone. Upon detecting your entrance, the System will start sounding the entry delay beeps alerting you to disarm the System before the entry delay ends.

After disarming, different displays may appear indicating that the System is in a state of alarm MEMORY. The MEMORY message will disappear only upon rearming the System. To disarm the System, proceed as shown:



**ARM indicator** on both the Keypad and PowerMaster panel extinguishes during the disarmed state. Disarming the System also stops the siren alarm, irrespective of whether the alarm was initiated during the armed or the disarmed state.

PRESS

RESULTING DISPLAY



PRESENT TAG OR  
ENTER CODE: ■-----

Enter code / present tag

Code / present tag

## Setting Partitions



### Partition Selection Process

Access to any desired partition is achieved through the use of an individual code or proximity tag. It is not possible to access the INSTALLER MENU if one or more partitions are in the AWAY modes.

Before attempting to perform any operation on any given partition(s), it is necessary to perform the operations below which enable you to select the desired/allowed partition(s) using the individual code or proximity tag:

PRESS	RESULTING DISPLAY
#	SELECT PARTITION
Enter partition # (1 - 3)	PARTITION 1 ■

### Notes:

- 1. The “Sad Tune” will be heard when selecting a partition to which no sensors / peripherals were enrolled.**
- 2. If a partition is enabled and no zones are assigned to the partition, the   icon will appear on the Keypad display.**

## To Program A User Code

 
### Step 1. RECALL BYPASS



Enter the [USER SETTINGS] menu, select the [USER CODES] option and press <sup>1</sup>

The first user code "User 01: 1111" is displayed. <sup>2</sup>

### Step 2. User 01: 1111



To recall the last used bypass scheme press .

At the blinking cursor position, key in the User Code you wish to program , for example, [06] for user code 6, or alternatively click the or button until the display reads, [User 06: 0000].

### Step 3. User 06: 0000



When the user code you wish to program appears on the display, press

### Step 4. User 06: 0000



To program or edit the code, at the blinking cursor position enter the 4 digit code, for example, "1234", using the numerical Keypad. <sup>3,4</sup>

When done, press

### Step 5. User 06: 1234

Return to step 3

A "Happy Tune" sounds. The display confirms the saved code. <sup>5,6</sup>

<sup>1</sup> For detailed instructions on how to select the setting options – Please refer to the manual on the website

<sup>2</sup> The display shows the 1st User Code (Master User) in the list of 8 (PowerMaster-10 G2) / 48 (PowerMaster-30 G2 /

PowerMaster-33 G2) User Codes. If you have not yet changed the default code 1111, we recommend that you change it now.

<sup>3</sup> a. The display shows the user code currently programmed in this location (e.g. 5327).

b. The cursor blinks on the first digit of the code.

c. If the location is free the display will be (0000).

<sup>4</sup> You can move the cursor to the next or previous digit by pressing or . Pressing erases the digit of the cursor + all digits to the right of the cursor.

<sup>5</sup> a. The new code is momentarily displayed without the cursor before reverting to step 3.

b. If Partition is enabled, continue to step 6.

<sup>6</sup> You can now repeat steps 3 - 5 to program or edit another user code. To end this session and to select other menu options or to quit programming.

## To Set Partitions Authorization\*

**Step 6. User 06: 1234**  
1 ■ 2 3

The display will now enable you to set the partitions.<sup>7</sup>

#

**Step 7. User 06: 1234**  
1 ■ 2 3 ■

Press the # button and use the Keypad keys 1 2 3 to change the status of the partitions 1, 2 & 3, respectively.<sup>8</sup>

i OK

When you are satisfied with the setting, for example, User 6 is authorized with Partition 1 and 3 only, press i OK to confirm.

🎵😊 Return to step 3

A "Happy Tune" 🎵 ☺ sounds. The display confirms the saved code.<sup>9</sup>

<sup>7</sup> This setting can be performed only after completing steps 1 - 5 of page 5

<sup>8</sup> At this stage, pressing the # button continuously switches between the first and second rows.

<sup>9</sup> You can now repeat steps 3 - 7 to program or edit another user code.

## Adding /Deleting Proximity Tags

Users of the alarm System may be provided with a proximity tag/s that can be used instead of the user codes to perform a variety of functions, for example, arming, disarming, reading the event log, etc.

Whenever a user code is required you can simply present a valid proximity tag instead of entering the user code.

◆ Here you can add (enroll) new proximity tags or delete tags as required.

**Step 1. TAGS (Proximity)**

Enter the [USER SETTINGS] menu, select the [TAGS (Proximity)] option and press i OK .<sup>1</sup>

i OK

**Step 2. ADD NEW TAG**

The display will read [ADD NEW TAG].<sup>3</sup>  
To begin the process of enrolling a new proximity tag press i OK

i OK

**Step 3. ENROLL NOW or  
ENTR ID:xxx-xxxx**

Present the proximity tag to the Keypad within the timeout period.

**Step 4. DEVICE ENROLLED  
T01:Tag (Prox)**

If enrollment was successfully completed, a “Happy Tune” 🎵 🗲 sounds and the display reads [DEVICE ENROLLED] for a short duration and then changes to read the tag’s details. <sup>4</sup>



🎵 🗲 Return to step 5

The display shows the allocated tag serial No (user No.), which is always the first free number, for example: [T01:Tag (Prox)].

**Step 5. → or ←**

**DEVICE ENROLLED  
T05:Tag (Prox)**



🎵 🗲 Return to step 2

To assign the tag to another user, for example, “User No. 5”, key in [05] or alternatively click the → or ← or button until the display reads [T05:Tag (Prox)] and then press to confirm.

The display reads [DEVICE ENROLLED] a “Happy Tune” 🎵 🗲 sounds and the display will then change to [T01:Tag (Prox)]. <sup>5 6</sup>

**Step 6. DELETE TAG**

🎵 🗲 Return to step 3

To delete the tag press the button.

A “Happy Tune” 🎵 🗲 sounds and the display reads [DELETE TAG] and returns to step 3. <sup>11</sup>

- 1 For detailed instructions on how to select User Settings – refer to section A.1 and section A.2.
- 2 The display shows the first enrolled Tag (Tag No.1) of the 8 (PowerMaster-10 G2) / 32 (PowerMaster-30 G2 / PowerMaster-33 G2) tags.
- 3 To abort enrollment, press the button.
- 4 If the tag was previously enrolled in the System, the KP-250 PG2 display indicates this together with the tag’s ID number, for example, “ALREADY ENROLLED T01:Tag (Prox)”.
- 5 If Partition is enabled, continue to step 6.
- 6 You can now enroll another proximity tag. You can also select another option in the User Settings menu, or quit programming
- 7 If no proximity tag is enrolled in the System, the display reads [NO EXISTING DEV.].
- 8 To abort the procedure, press the button.
- 11 You can now add or delete another proximity tag. You can also select another option in the User Settings menu, or quit programming

## To Set Partitions Authorization\*

**Step 1. T05:PARTITIONS**  
1 ■ 2 3

Use the Keypad keys **1** **2** **3** to change the status of the partitions 1, 2 & 3, respectively.<sup>9</sup>

**Step 2. T05:PARTITIONS**  
1 ■ 2 3 ■

When you are satisfied with the setting, for example, User 5 is authorized with Partition 1 and 3 only, press **i OK** to confirm.

**i OK**

🎵😊Return to step 2

A “Happy Tune” 🎵 ☺ sounds. The display confirms the Partition setting.<sup>10</sup>

<sup>9</sup> This setting can be performed only after completing steps 1 - 5 of section on page 7

<sup>10</sup> You can now repeat steps 2 - 7 to program or edit another Proximity tag.

## Bypass Zone

Enter the **[USER SETTINGS]** menu<sup>1</sup>, select the **[SET ZONE BYPASS]**<sup>2</sup> option and press **i OK**.

**Step 1. SET ZONE BYPASS**

**i OK**

The first zone, Z01, is displayed.<sup>3</sup>

**Z01: READY**  
Office 1



**Z01: P1 ■ P2 P3**

**Step 2. → ←**

Click the **→** or **←** button until the display reads the zone you wish to bypass (or clear bypass), for example, “Z04” for Zone 04. After several seconds the LEDs on the respective device starts flashing indicating “it’s me”.

**Z04: NOT READY**  
Z04: P1 ■ P2 P3



**Step 3. Office 2**

When the display reads the zone you wish to bypass press **i OK**

**i OK**

<sup>4</sup>

**Step 4. <OK> TO BYPASS**

The display now reads **[<OK> TO BYPASS]**.<sup>5</sup>  
To bypass the selected zone press **i OK**

**i OK**

**Z04: BYPASSED**

A “Happy Tune” 🎵 ☺ sounds and the updated zone status is now displayed i.e. **[Z04: BYPASSED]**.<sup>8</sup>



## Clearing Bypass Zone

Step 5. Z04: BYPASSED  
Z04: P1  P2 P3



Step 6. Office 2




<OFF> TO CLEAR




Step 7. Z04:READY

 
 
Repeat steps 1 to 2 above.

4

When the zone you wish to clear bypass appears on the display (for example, "Z04"), press  to confirm. You can also identify the device by looking for the "it's me" LED indication on the displayed device.

The display now reads [<OFF> TO CLEAR].<sup>5</sup>

To clear the bypassed zone press the button .

A "Happy Tune"   sounds and the updated zone status is now displayed, i.e. [Z04: READY] or [Z04: NOT READY].<sup>9</sup>

 
## Review Bypass

Here you can quickly review the Bypass Scheme i.e. the zones that are set to be bypassed during the next arming session.

 
1. REVIEW BYPASS



Enter the [USER SETTINGS] menu and select the [REVIEW BYPASS]<sup>1</sup> option and press



2. BYPASS LIST






The display reads [BYPASS LIST]

3. Z04: BYPASSED  
Z04: P  P2 P3



Office 2

 
Click the  or  buttons repeatedly to review all bypassed zones in ascending numerical order. When done, click  to exit.<sup>9</sup>

## Recalling Bypass

Use this option to repeat (recall) the most recent Bypassed Scheme for use during the next arming session.

### 1. RECALL BYPASS



Enter the [USER SETTINGS] menu, select the [RECALL BYPASS] <sup>1</sup> option and press . <sup>2, 6</sup>



The display now reads [<OK> TO RECALL]. <sup>7</sup>

### 2. <OK> TO RECALL



To recall the last used bypass scheme press .

BYPASS RECALLED

A “Happy Tune”   sounds. The display reads [Bypass RECALLED] and then returns to “USER SETTINGS” step 1. <sup>9</sup>

  Return to step 1



1 For detailed instructions on how to select User Settings

2 This menu is displayed only if “BYPASS” was previously enabled by the installer.


3 The STATUS to the right of the zone number indicates whether the zone is READY, NOT-READY or BYPASSED.

4 This display will appear only if PARTITIONING was previously enabled.

5 a. If the zone you selected is “not bypassed”, the display prompts you to press [<OK> TO BYPASS]. However, if the zone you selected is already “bypassed”, the display prompts you to press [<OFF> TO CLEAR].

b. To abort and return to the previous step press  or .

6 This menu is not displayed if Partition is enabled.

7 The display now prompts you to press [<OK> TO RECALL] i.e. to repeat the last used bypass scheme. To abort and return to the User Settings menu, press .

8 You can now repeat steps 2 - 4 to bypass or clear another zone. To end this session and to select other menu options or to quit programming

9 You can now select another option in the User Settings menu, or quit programming.

## Useful Phone Numbers

### Customer Service Centre

Call 0344 800 1999\* to request a routine inspection, report a fault, request a remote reset or if you have a query with the monitoring of your System.

### Customer Sales Centre

Call 0800 010 999 to upgrade your System or Service Plan.

### Moving Home?

Call 0800 169 0612 to let us know you are moving and for details of our moving offers.

\* Calls charged at the standard rate of a regular local or national landline number.  
Costs from mobiles may vary.

